

Alcatel **OmniPCX** Office

Alcatel OmniTouch Call Center Office

Supervisor Application

User Manual



NOTE

Product specifications contained in this document are subject to change without notice. Products and services described in this document may not be offered in every country. For the most current information, please contact your Alcatel representative or your Alcatel equipment provider.

Copyright © 2000-2004 Alcatel. All rights reserved for all countries. This document may not be reproduced in whole or in part without the express written permission of Alcatel.

Alcatel® and the Alcatel logo are registered trademarks of Alcatel. All other trademarks are the property of their respective owners.

This manual has been updated for version R3.1.

The CE mark indicates that this product conforms to the following Council Directives:

- 89/336/CEE (concerning electro-magnetic compatibility)
- 73/23/CEE (concerning electrical safety)
- 1999/5/CE (R&TTE)



Chapter 1
Supervisor application

1-1	Presentation of the Supervisor application	1. 1
1-1-1	Connecting and disconnecting	1. 2
1-1-2	The Supervisor application interface	1. 3
1-2	Agent supervision	1. 7
1-2-1	Agent parameters.....	1. 7
1-2-2	Agent activity	1. 9
1-3	Call and group supervision	1. 11
1-3-1	Group parameters.....	1. 11
1-3-2	Call distribution.....	1. 13
1-4	Line observation	1. 16
1-4-1	Observe line status	1. 16
1-5	Display customisation	1. 17
1-5-1	Customise the Call Distribution screen	1. 17
1-5-2	Select agents by group.....	1. 18
1-5-3	Select agents on an agent by agent basis	1. 18
1-5-4	Customise the agent activity rate graph	1. 19

Chapter 2

Use of announcements

2-1	Description of the announcements	2. 1
2-2	Selecting announcements	2. 1
2-3	Creating announcements messages	2. 3
2-3-1	Recording announcements (.wav) on a PC	2. 3
2-3-2	Recording ACD messages using a phone set	2. 4
2-3-3	Converting an announcement file	2. 4
2-3-4	Recording ACD messages using a professional studio.....	2. 5

1-1 Presentation of the Supervisor application

The Supervisor application allows you to view real-time information on the activity of the Call Centre and to simultaneously change parameters, the status and assignment of agents, groups and ACD (Automatic Call Distribution) calls.

You therefore have real-time access to information such as the number and status of the agents connected, the number of calls waiting, of calls deterred or lost, and the status and composition of groups.

Functions

The Supervisor application can be used to perform the following operations:

Observe Call Centre activity

The Supervisor application provides a tool which can be used to immediately check the status of your team. In real-time you can:

- Observe agent parameters.
- Observe the status of agents assigned to sets: free, on a break, post-processing or busy.
- Observe agent activity.
- Observe agent activity rates (displayed as a graph).
- Observe call distribution (number of calls waiting, received, processed, abandoned, deterred, number of transactions conducted).
- Observe line status (ACD ports).

Manage Call Centre activity

You can also intervene to:

- Change agent status by placing them on or off duty.
- Change group status by opening or closing them.
- Assign agents to groups.
- Change the order of priority of agents in groups.

Customise how the Call Centre observation windows are displayed

You can:

- Customise the Call Distribution screen.
- Customise the agent activity rate graph.

Note: The supervisor can also act as an agent. However, the Supervisor application cannot under any circumstances replace the agent application.


1-1-1 Connecting and disconnecting

1-1-1-1 Connecting to the Supervisor application

Procedure

1. On the desktop, click the Supervisor Console icon.

The connection window appears.

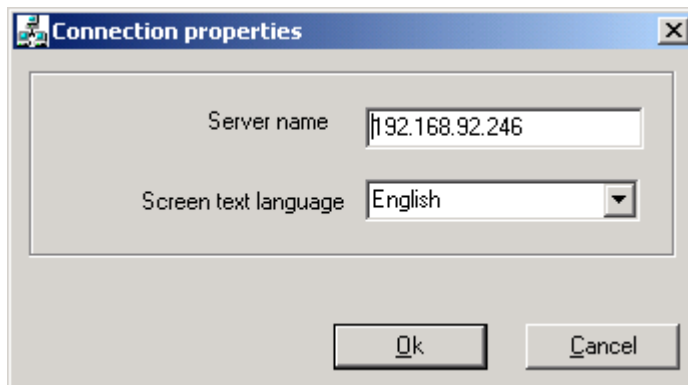

2. In the **Server Name** field, enter the server name or IP address.
3. From the **Language of Screen Text** menu, select the language in which the screens will be displayed.
4. Confirm by clicking **OK**.

The supervision window is displayed and you are now connected.

You can now supervise the activity of the Call Centre.

1-1-1-2 Disconnecting from the Supervisor application

Procedure

Click on  in the upper right-hand corner of the window to close the application window.

You are now disconnected from the Supervisor application.

1-1-2 The Supervisor application interface

1-1-2-1 Presentation of the interface

The Supervisor application contains three types of screen:

- A screen for observing agents or groups.
- A screen for customising how the observation windows are displayed.
- A screen for observing line status (ACD ports).

1-1-2-2 Agent or group observation screen

This screen provides real-time information on agent sets, on groups and agent activity rates (screen refreshing every second).

It has the following areas:

- upper area
- Agent Activity Rate area
- Call Distribution area

Upper area

The upper area lists general information on agents in the form of a table, such as their number, their set number and their name, and real-time information (the groups they belong to, order of priority in groups, activity rate, agent status, connection of the Agent application).

 Agent	Station	Name	Group	Rank	Rate	Status	PC
1		Mikes	1 4 7	01 01 01	0 %	FAULTY	
3	100	Paul	1 2 4 7	03 03 03 03	0 %	Off duty	
5	103	Jane	1 3 5	01 03 02	0 %	Off duty	
6		John	1 2	02 02	0 %	Off duty	
7	106	Toto	1 2	02 05	0 %	FAULTY	

From this table, you can:


- Observe agent parameters
- Observe agent status in real-time

You can also perform the following tasks as required:

- Change the status of one or more agents
- Assign agents to groups
- Change the priority of agents in groups

Agent Activity Rate area

This area displays the agent activity rate as a customisable bar chart or graph:

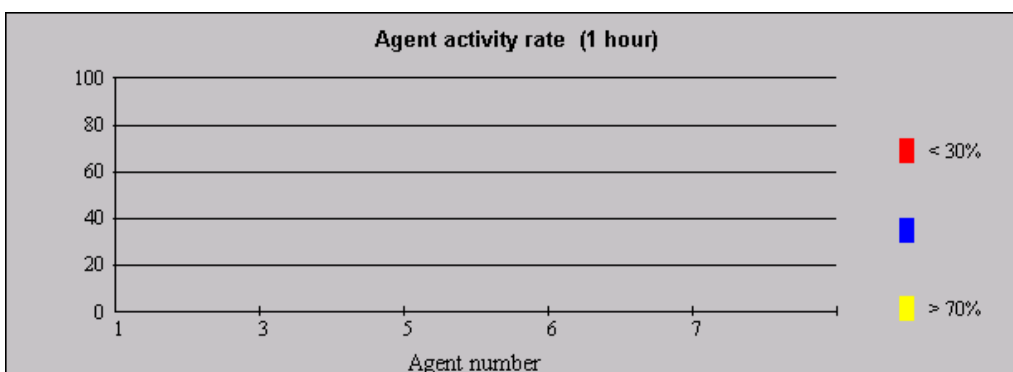

From this table, you can:

- Observe agent activity rates

Note: This screen can be customised.

Call Distribution area

This area shows the distribution of ACD calls to ACD groups in the form of a table:

- The columns represent the groups selected in the display parameters.
- The rows represent the call and group parameters.

	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8
Answered calls	0							
Calls being routedd	0							
Waiting time < overflow time	0							
Waiting time > overflow time	0							
In queue > S1	0							
In queue > S2	0							
Deterred calls	0							
Calls service closed	0							
Group status	Open(M)							
Satured group								
Awaiting call								
Deterred call								

From this table, you can:

- Observe call distribution (real-time traffic).
- Change group status if necessary.

Note: To switch from the Agent screen to the Group screen, click the corresponding button at the bottom of the observation screen.

1-1-2-3 Customisation screen

This screen allows you to customise how the observation windows are displayed.

It has the following areas:

- area for selecting agents and groups
- area for displaying the agents and groups selected
- area for display parameters of the agent activity rate

Area for selecting agents and groups

This area is used to select the agents or groups which will be displayed in the observation windows.

Agent	
☒ By group	
☐ Specific	

Group	
☒ 1	☐ 5
☐ 2	☐ 6
☐ 3	☐ 7
☐ 4	☐ 8


- **Agent:** is used to choose a selection mode for agents and groups.
 - **By group:** is used to select agents by group.
 - **Specific:** is used to select agents on an agent by agent basis.
- **Group:** is used to select the groups to be displayed in the group observation screen.

Area for displaying the agents and groups selected

This area shows a list of the selected agents to be displayed in the observation screens, and a list of all the agents, if the **Specific** option is selected in the agent and group selection area.

Area for display parameters of the agent activity rate

This area is used to customise the agent activity rate graph.

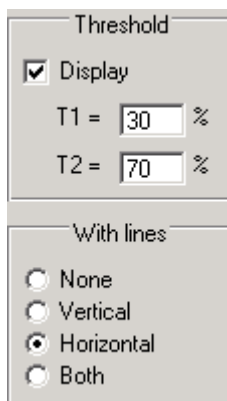

Threshold

☒ Display

T1 = %

T2 = %

With lines

☐ None

☐ Vertical


☒ Horizontal

☐ Both

- **Threshold:** used to change the view thresholds of the activity thresholds T1 and T2 in the graph.
 - **Display:** used to display or hide the view thresholds.
 - **T1 =:** used to enter a view threshold T1.
 - **T2 =:** used to enter a view threshold T2.
- **With lines:** used to change the gridlines of the graph:
 - **None:** displays the graph without gridlines.
 - **Vertical:** displays the graph with vertical gridlines.
 - **Horizontal:** displays the graph with horizontal gridlines.
 - **Both:** displays the graph with vertical and horizontal gridlines.

1-1-2-4 Line status observation screen

This screen provides real-time information on the status of lines (with screen refreshing every second).

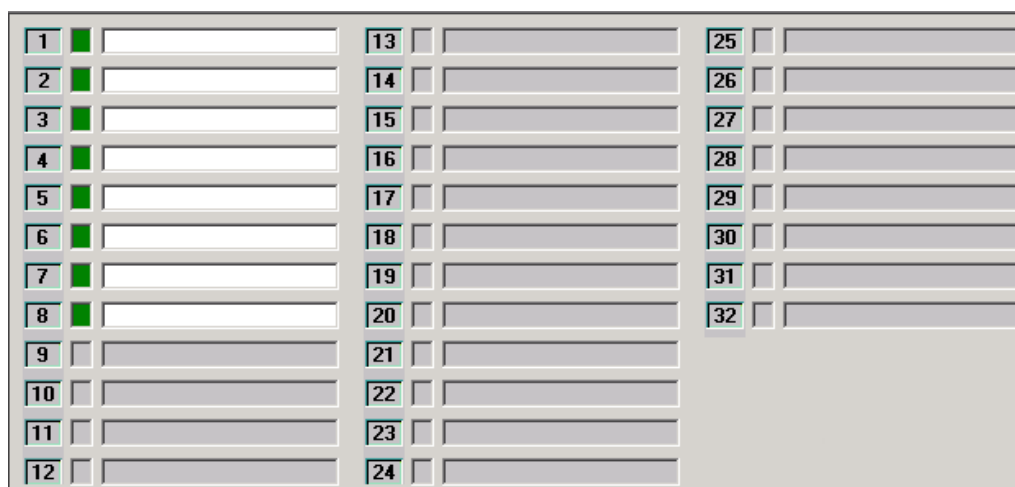

1	☒		13	☐		25	☐	
2	☒		14	☐		26	☐	
3	☒		15	☐		27	☐	
4	☒		16	☐		28	☐	
5	☒		17	☐		29	☐	
6	☒		18	☐		30	☐	
7	☒		19	☐		31	☐	
8	☒		20	☐		32	☐	
9	☐		21	☐				
10	☐		22	☐				
11	☐		23	☐				
12	☐		24	☐				

To switch from the line status observation screen to the agent or group observation screen, click the **Lines** or **Supervisor Console** button at the bottom of the observation screen.

1-2 Agent supervision

1-2-1 Agent parameters

1-2-1-1 Observe agent parameters

Access

From the agent or group observation screen, access the upper area listing agent parameters.

Presentation

Agent parameters are displayed in the form of a table:

☐ Agent	Station	Name	Group	Rank	Rate	Status	PC
1		Mikes	1 4 7	01 01 01	0 %	FAULTY	
3	100	Paul	1 2 4 7	03 03 03 03	0 %	Off duty	
5	103	Jane	1 3 5	01 03 02	0 %	Off duty	
6		John	1 2	02 02	0 %	Off duty	
7	106	Toto	1 2	02 05	0 %	FAULTY	

- **N°:** shows the agent's identity number.
- **Number:** shows the directory number of the agent's set.
- **Name:** shows the agent's name.
- **Groups:** shows the group or groups the agent belongs to.
- **Rank:** shows the priority rank of the agent in each of his groups.
- **Rate:** shows the agent's activity rate.
- **Status:** shows the agent's operating status.
- **PC:** shows the connection status of the Agent application. If the agent is connected to the Agent application (from a PC), the corresponding box is coloured green.

1-2-1-2 Observe agent status

Access

From the agent or group observation screen, access the upper area listing agent parameters. The status of agents is displayed in the penultimate column of the table.

Presentation

The **Status** column displays the status of each agent's set in real-time.

A set can have the following statuses:

- **On duty**

The agent is at his set. A set which is in service can have several different statuses, depending on the agent's activity.

- **Temporary Absence**

The agent has temporarily gone off duty, for example, for a break.

- **Clerical Work**

Following an ACD conversation, the agent may, for example, need to assess the call (fill out a customer information screen etc.); he temporarily withdraws from the call distribution chain.

- **Off Duty**

The agent has withdrawn from all ACD groups or the agent has no associated terminal.

Note: An agent observed as off duty on an isolated basis can very easily have an activity rate of 80% for the hour currently being observed.

1-2-1-3

Change agent status

The Supervisor application allows you to change the status of agents in real-time, as required. For example, if lots of calls suddenly arrive, you can change the status of agents so that they remain on duty and take calls.

Access

From the agent or group display screen, access the upper area listing agent parameters.

Procedure

1. In the **Status** column of the table, click the cell corresponding to the agent whose parameters you want to change.

The **Agent X Parameters** window appears.

	1	2	3	4	5	6	7	8
Group	☒	☒	☐	☒	☐	☐	☒	☐
Rank	3	3	3	3	3	3	3	3
Station	100							
Name	Paul							
Status	Off duty							

Ok Cancel Apply

2. From the **Status** drop-down list, select the status that you want to assign to the agent: **Off duty, On duty, Clerical work, Temporary absence**.

3. Click **Apply** to confirm the data, then **OK** to close the window.

The changes are taken into account by the system and the new parameters of the agent are shown in the table.

1-2-2 Agent activity

1-2-2-1 Observe agent activity

You can observe the real-time activity of agents selected for display in the observation windows, and know, for example, whether an agent has incoming calls, whether he is in conversation, has taken a break or is unavailable.

Access

From the agent or group observation screen, access the upper area listing agent parameters. Agent activity can be observed in the **Status** column, the penultimate column of the table.

Presentation

When in service, the set of an agent can have one of the following statuses:

- **Awaiting Call**

The agent assigned to an ACD group is likely to answer the next ACD call.

- **No Answer**

A call has been sent to an agent who does not answer.

Two scenarios are possible:

- If the option **Agents That Do Not Answer Are Automatically Removed** has been activated, the agent is taken off duty.
- If the option **Agents That Do Not Answer Are Automatically Removed** has not been activated, the agent stays off duty for the time period defined in the field **Duration of an Agent's Temporary Removal After Failure To Answer** before being switched back to **Awaiting Call** status.

*Note: The option **Agents That Do Not Answer Are Automatically Removed** and the field **Duration of an Agent's Temporary Removal After Failure To Answer** are configured by the system administrator.*

- **Being Routed**

The agent's set is reserved for a call currently being transferred to it (the set is not yet ringing).

- **Ringing**

The agent's set rings after transfer of the ACD call.

- **ACD Busy**

The agent is holding an ACD conversation.

- **Idle**

The agent has just hung up after an ACD call. He is then given an idle period before another call is sent.

Note: The idle period is configured by the system administrator.

- **Not Available**

The agent's set is busy with non-ACD calls.

- **Faulty**

The agent's set is temporarily not being managed by the ACD.

- **Busy, Outgoing Call**

The agent's set is off the hook without any dialling taking place or the agent is making a non-ACD call.


1-2-2-2 Observe agent activity rates

Access

From the agent status supervision window, access the **Agent Activity Rate** area.

Presentation

The agent activity rate is represented as a graph.

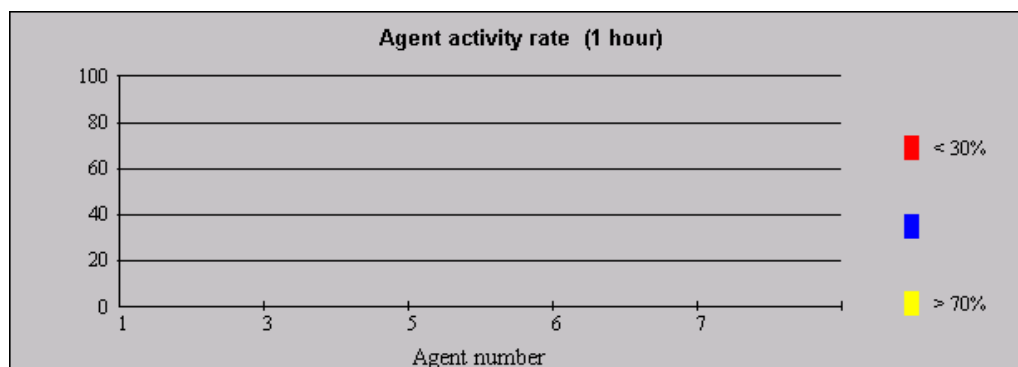

For each agent, the agent activity rate corresponds to the ratio between the time spent on ACD calls in the selected time slot, and the period of time used to calculate activity rates (1 hour or 1/2 hour).

The data displayed on agent activity rates can be changed by customising the Agent Activity Rate graph.

Note: Agent activity rates are also displayed as a percentage in the Rate column of the agent observation table, in the upper area of the window.

1-3 Call and group supervision

1-3-1 Group parameters

1-3-1-1 Assign agents to groups

The Supervisor application allows you to change the content of groups, by obliging an agent to move from one group to another, depending on the call load in the queue, the duration of calls or the workload observed.


Access

From the agent or group display screen, access the upper area listing agent parameters.

Procedure

1. In the **Status** column of the table, click the cell corresponding to the agent whose parameters you want to change.

The **Agent X Parameters** window appears.

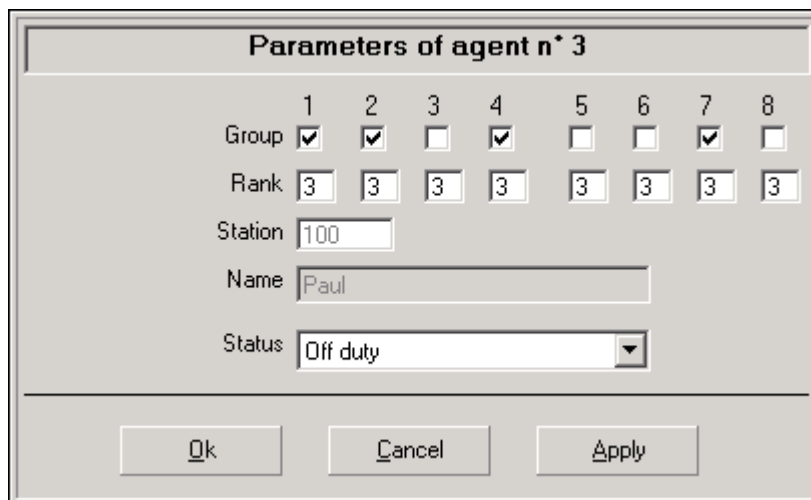

The dialog box titled "Parameters of agent n° 3" contains the following fields:

	1	2	3	4	5	6	7	8
Group	☒	☒	☐	☒	☐	☐	☒	☐
Rank	3	3	3	3	3	3	3	3
Station	100							
Name	Paul							
Status	Off duty							

Buttons:

2. In the **Groups** field, check or uncheck the boxes corresponding to the groups which you want the agent selected to be assigned to.

3. Click **Apply** to confirm the data, then **OK** to close the window.

The changes are taken into account by the system and the new parameters of the agent are shown in the table.

1-3-1-2 Change the priority of agents in groups

Access

From the agent or group observation screen, access the upper area listing agent parameters.

Procedure

1. In the **Status** column of the table, click the cell corresponding to the agent whose parameters you want to change.

The **Agent X Parameters** window appears.

	1	2	3	4	5	6	7	8
Group	☒	☒	☐	☒	☐	☐	☒	☐
Rank	3	3	3	3	3	3	3	3
Station	100							
Name	Paul							
Status	Off duty							

Ok Cancel Apply

2. In the **Rank** field, enter below each group a figure corresponding to the rank that the agent must hold in that group.

Note: The rank of the agent can be specified, even for groups which he is not currently assigned to.

3. Click **Apply** to confirm the data, then **OK** to close the window.

The changes are taken into account by the system and the new parameters of the agent are shown in the table.

1-3-2 Call distribution

1-3-2-1 Observe call distribution

Access

From the agent or group observation screen, access the **Call Distribution** area.

Presentation

The **Call Distribution** area lists the following elements in the form of a table:

- Call parameters
- Group parameters

1-3-2-2 Group parameters

Presentation

Group parameters can take the following values:

- **Group Status:**

Forcing to open or closed status is indicated on the observation screens by the letter M for Manual. To view these statuses, click on the **Group Status** field, selecting the group required.

The group statuses are:

- OPEN M: group forced open.
- CLOSED M: group forced closed.
- OPEN: group open (depending on time slot or contact).
- CLOSED: group closed (depending on time slot or contact).

- **Saturated Group:** there are too many calls and the group is overloaded.

A given group is shown as overloaded as follows:

- Group x Saturated (orange): no agents are free in the group, the next call will be placed in the queue.
- Group x Saturated (red): the time elapsed since the group was saturated is longer than the value **Time Delay With Flashing of Overload Messages** defined by the system administrator.

- **Calls in Queue:** there is at least one call in the queue.

- **Calls Deterred:** at least one call has been deterred.

Note: All the percentages in the table are calculated in relation to calls coming into the ACD.

1-3-2-3 Call parameters

Presentation

Call parameters can take the following values:

- **Calls Answered:**

Number of ACD calls transferred to an agent, and resulting in a conversation being started (even if the conversation time is 0 seconds), regardless of the group (called or through overflow).

- **Calls Being Routed:**

Number of calls in the process of being connected to an agent, but not yet put through.

- **Waiting Time < Overflow Time:**

Number of calls waiting for a period of time less than the **Overflow Time**, where the **Overflow Time** represents the overflow time delay defined for each ACD group by the system administrator.

Note: An agent is searched for only in the group requested.

- **Waiting Time > Overflow Time:**

Number of calls waiting for a period of time greater than the **Overflow Time**.

Note: An agent is searched for in the group requested and possibly in the overflow group if the latter is entered.

- **In Queue >S1:**

If the parameter **Waiting Begins Before Overflow Time Delay** is checked:

- **In Queue >S1:** Number of calls where the waiting time is longer than **S1**, where **S1** is a threshold defined by the system administrator, allowing the determination of service quality criteria.

In this case, counting of the queue time for the statistics starts as soon as the call enters the queue.

If the parameter **Waiting Begins Before Overflow Time Delay** is not checked:

- **In Queue >S1:** Number of calls waiting for a period of time greater than (**S1** + **Overflow Time**).

In this case, counting of the queue time for the statistics starts on termination of the overflow time delay, the wait before this threshold being ignored.

- **In Queue >S2:**

If the parameter **Waiting Begins Before Overflow Time Delay** is checked:

- **In Queue >S2:** Number of calls where the waiting time is longer than **S2**, where **S2** is a threshold defined by the system administrator, allowing the determination of service quality criteria.

If the parameter **Waiting Begins Before Overflow Time Delay** is not checked:

- **In Queue >S2:** Number of calls waiting for a period of time greater than (**S2** + **Overflow Time**).

Note: The option Waiting Begins Before Overflow Time Delay is configured by the system administrator.

- **Calls Deterred:**

Number of calls routed to the dissuasion announcement following saturation of the queue, or if no agent is defined in a given group.

- **Calls Service Closed:**

Number of calls taking place while the group is closed.

1-3-2-4 Change group status


Access

From the agent or group display screen, access the **Call Distribution** area.

Procedure

1. In the table, click in the column corresponding to the group that you want to change.

The window **Status of Group N° X** is displayed.

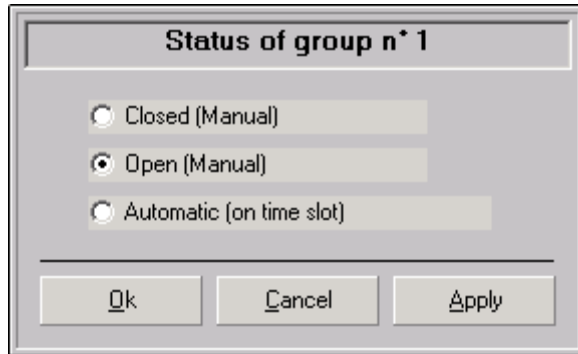

2. Select one of the following statuses:

- **Open** (Manual): group forced open
- **Closed** (Manual): group forced closed
- **Automatic** (On Time Slot): group open in accordance with time slots

3. Click **Apply** to confirm the data, then **OK** to close the window. The status of the group is changed in real-time.

1-4 Line observation

1-4-1 Observe line status

The **Supervisor** application allows supervisors to access real-time information on lines (ACD ports) so that maintenance can be carried out.

Access

To access the observation screen, click **Lines**.

Presentation

This screen shows the activity of the server lines in real-time (with screen refreshing every second). The screen shows:

- The line number, between 1 and 8.
- The line status. It is indicated by a coloured square to the right of the line number.

The lines can have one of the following four statuses:

- **free**: represented by a green square.
- **incoming call**: represented by a yellow square with a > sign.


- **outgoing call**: represented by a yellow square with a < sign.
- **fault**: represented by a red square.
- The application used by the lines in real-time, in the case of ACD calls.

1-5 Display customisation

1-5-1 Customise the Call Distribution screen

Access

Click the **Parameters** button. The customisation screen appears.

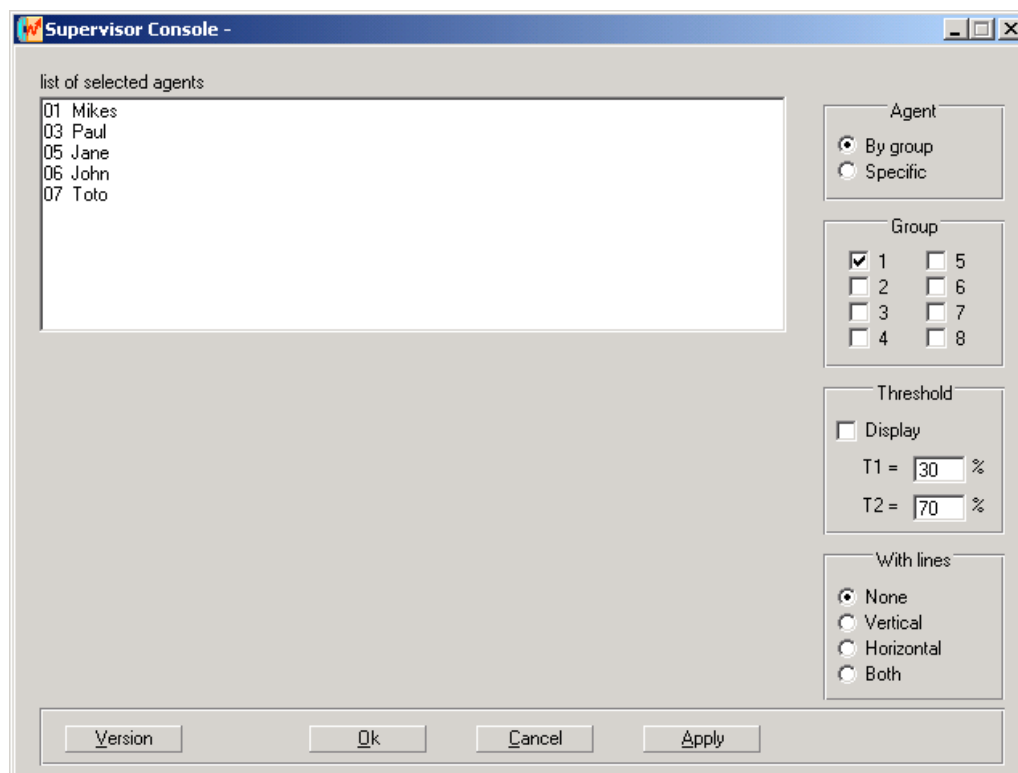

Procedure

You can customise the **Call Distribution** screen:

- either by selecting agents by group (agent area, **By Group** option).
- or by selecting agents on an agent by agent basis, regardless of the group they are assigned to

(agent area, **Specific** option).

1-5-2 Select agents by group

Procedure

In the customisation screen of the **Supervisor Console**:

1. Select the **By Group** option in the **Agent** area, then select the groups that you want to observe by checking the relevant box or boxes in the **Group** area.
2. Click **Apply**.

The agents belonging to the group selected are displayed in the **List of Selected Agents** area.

3. Click **OK** to confirm the data and close the customisation window.

The observation screen of the Supervision console is displayed. The table displays data in accordance with the customisation parameters defined.

1-5-3 Select agents on an agent by agent basis

Agents are selected on an agent by agent basis, regardless of the group they belong to.

Procedure

In the customisation screen of the **Supervisor Console**:

1. Select the **Specific** option in the **Agent** area.

All agents configured are displayed in the **List of All Agents** area, in the lower part of the window.

- To add an agent:

Select the agents you want to appear in the observation window in the **List of All Agents** area, then click the **Add Agent** button, or double-click on the agent in the **List of All Agents** area.

The agent is displayed in the **List of Selected Agents** area.

Note: Each agent must be selected individually.

- To delete an agent:

Select the relevant agent from the **List of Selected Agents** area, then click the **Delete Agent** button, or double-click on the agent in the **List of Selected Agents** area.

The agent disappears from the **List of Selected Agents** area.

- To delete all agents:

Click the **Delete All Agents** button. All agents disappear from the **List of Selected Agents** area.

2. Click **OK** to confirm the data and close the customisation window.

The observation window of the **Supervisor Console** is displayed. The table shows how it has been customised.

1-5-4 Customise the agent activity rate graph

Customisation of the **agent activity rate** graph consists of:

- Changing the view percentage of activity thresholds T1 and T2.
- Changing the gridlines of the graph.

Access

Click the **Parameters** button. The customisation window appears.

Procedure

- In the **Threshold** area:
 1. Check the **View** box to display thresholds T1 and T2 on the activity rate graph.
 2. In the fields **T1 =** and **T2 =**, enter the required value. T1 and T2 indicate quality of service, allowing rapid analysis of activity rates.

Note: T1 and T2 can be used to change the view thresholds of the agent activity rate.

- In the **Gridlines** area:
 3. Select the type of gridline required by checking the boxes **None**, **Vertical**, **Horizontal** or **Both**.
 4. Click **OK** to confirm the data and close the customisation window.

The observation window of the supervision console is displayed. The graph is displayed with the new customisation.

Announcements are broadcast while telephone traffic is being processed. The call center contains default announcements. New ones can also be created.

2-1 Description of the announcements

The four types of announcement are:

- **Welcome announcement**

This announcement is broadcast when a call arrives in the group. (60 seconds max.)

- **Queue announcements**

The first announcement is used when the call joins the queue for the first time; it is broadcast once only. (60 seconds max.) The second announcement is used after the first queue message; it is broadcast continuously until the call leaves the queue. (300 seconds max.)

- **Dissuasion announcement**

This announcement is broadcast when the queue is saturated. (60 seconds max.)

- **Closure announcement**


This announcement is broadcast when the ACD group is closed. (60 seconds max.)

Note: The minimum value of the first queue announcement and the welcome, dissuasion and closure announcements is 0 seconds. The minimum value of the second queue announcement is 20 seconds. If the value of the announcement is set to 0 seconds, it can be deleted.

2-2 Selecting announcements

To select the announcement you want to use, do the following:

1. Click **ACD Messages**. The **ACD Voice Messages** window appears. This window has the following two areas:
 - The **ACD Group** area is used to select the announcements for each group or all the groups.
 - The **Transfer Selected Messages** area is used to import or export announcements to the call center or to the system.

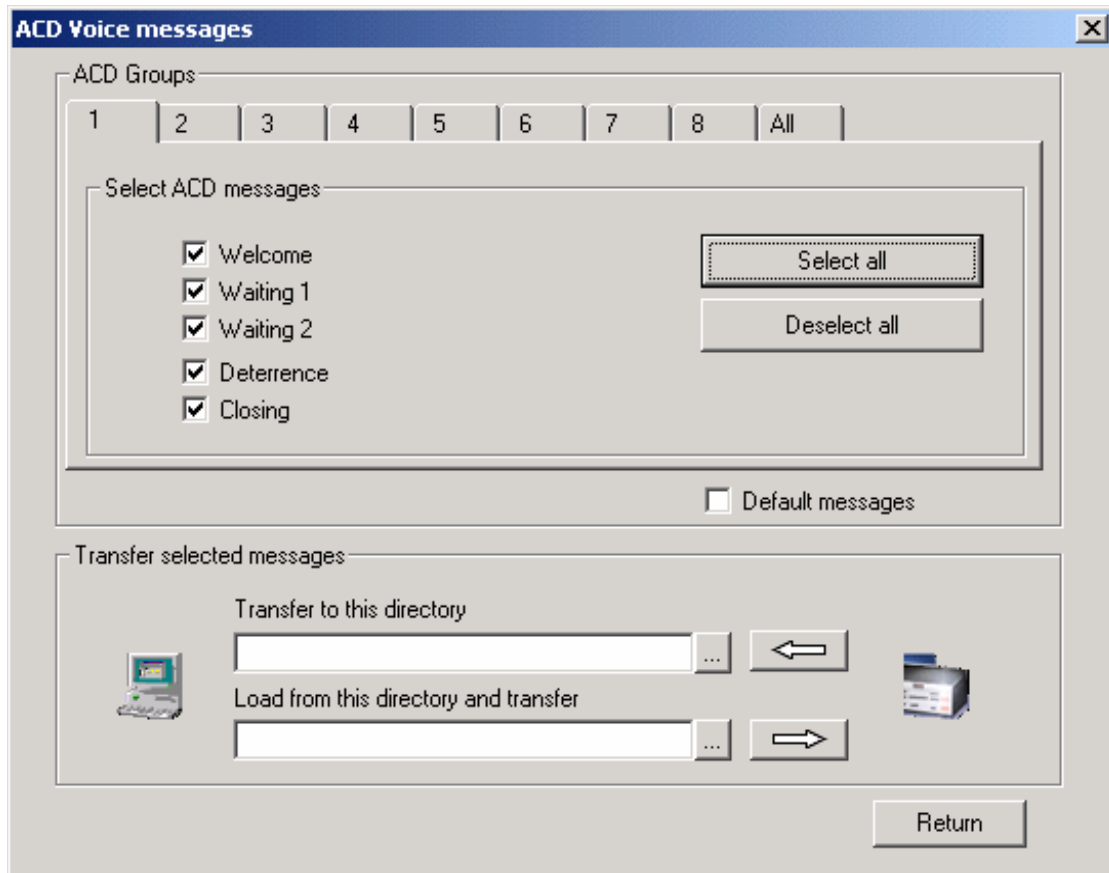

2. In the **ACD Group** area, click tab **1, 2, 3, 4, 5, 6, 7** or **8** if you want to select announcements for a given group, or click **All** to select the announcements for all groups.

2. 1 To select the type of announcement one by one, check or uncheck the following boxes:

- **Welcome:** this announcement is broadcast when a call arrives in the group.
- **Queue 1:** this announcement is broadcast once only, when the caller joins the queue.
- **Queue 2:** this announcement is continuously broadcast after the first queue announcement.
- **Closure:** this announcement is broadcast when a call arrives in the group to indicate the group is closed.
- **Dissuasion:** this announcement is broadcast when the queue is full.

2. 2 To select all five announcements, click the **Select All** button.

Note: To cancel the selection, click **Deselect All**.

3. In the **Transfer Selected Messages** area, click the button to the right of the field **Load From This Folder and Transfer**. The **Select Folder** window is displayed. The announcements are by default saved in C:/Program Files/PCXTools/PM5/R300_XXX/acd/Voice Messages. They are available in English only.

40 messages are available (5 for each ACD group). Each message is identified by a file made up of 3 figures x, y and z and with the extension .wav:

- **x** corresponds to the number of the ACD group (1 to 8)
- **y** is always equal to 0
- **z** corresponds to the message of the ACD group (1 to 5)

The messages types are as follows:

- **1** corresponds to the welcome message
- **2** to queue message 1
- **3** to queue message 2
- **4** to the dissuasion message
- **5** to the closure message

For example, file 305.wav corresponds to the closure message for group 3.

Note: on starting the ACD, the system does not understand any messages. To conduct tests, it is therefore essential to load the default ACD messages.

4. Select the announcements and click the => button. The messages selected are transferred to the call center.
5. Click **OK**. The **ACD Voice Messages** window disappears.

2-3 Creating announcements messages

To create your own announcement messages, you can use the recording software available on your PC (Window/Accessories/Multimedia/Sound Recorder) or any multimedia application.

2-3-1 Recording announcements (.wav) on a PC

Proceed as follows:

1. On your PC, open a recording tool by clicking **Start > Programs > Accessories > Multimedia (or Entertainment) > Sound Recorder**. The following window is displayed:



In order to record the message, your computer must be fitted with a sound card. Otherwise, a message informs you that the recorder is operating in restricted mode.

2. If the sound card is available and configured, start to record your message by clicking on the red button in the bottom right of the window.
3. To stop the recording, click the rectangular button.
4. To check and listen to the recorded message, click the triangular button.
5. If you are happy with the message, record it by clicking **File > Save**. Give it a file name and check the message format.

Caution: announcements must have the format CCITT A/MU-law 8 KHz, 8 bits, mono. The announcements created must have the same name as the default messages.

6. If the format is not correct, click **Change** and select the format CCITT A/MU-law 8 KHz, 8 bits, mono. Click **OK** to confirm and **OK** again to save the message.

2-3-2 Recording ACD messages using a phone set

If you cannot record ACD messages using a PC, it is possible to record information messages using a Reflexe set (Menu/System/Install/MV/inFMsg 1 to 50), and then export them using the menu PM5/Voice Application/Information Message/Transfer. Once they have been exported, convert and rename the messages in the ACD-compatible format, then re-import them to the ACD.

2-3-3 Converting an announcement file

If the format of your file is not compatible, convert it using the following procedure:

- Open the .wav file to be modified in **Sound Recorder** and click **File > Properties** to check the file format.
- If the format shown is different from CCITT A/MU-Law 8 KHz, 8 bits, mono, click **Convert Now...**. A window opens; select the format CCITT A-Law or CCITT MU-Law and click **OK** to

confirm.

- Save your file.

2-3-4 Recording ACD messages using a professional studio

For optimum quality, the services of a professional recording studio should be used. If this option is chosen, observe the file format required.

